

# BOBBIBROWN


#### Bobbi Brown new makeup system tiles

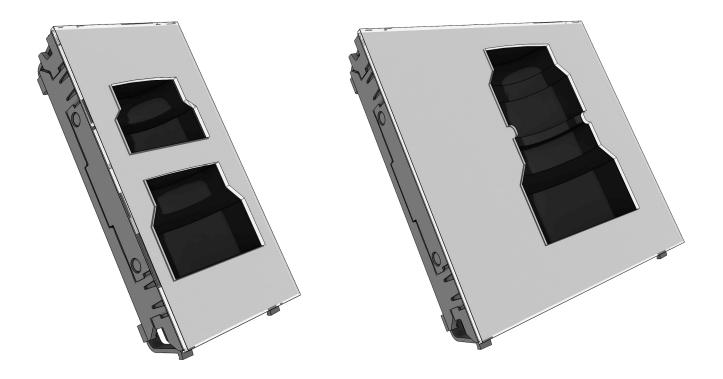


#### Tiles elements

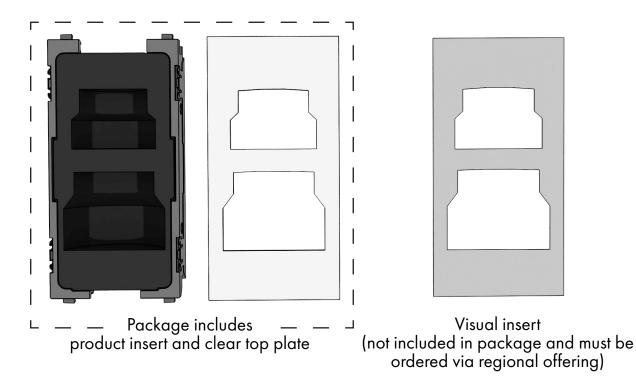

### Visual insert implementation

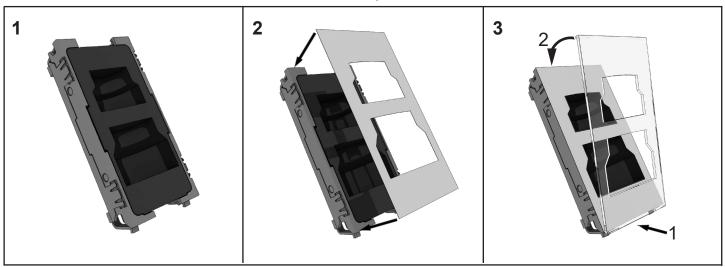



### Visual insert update

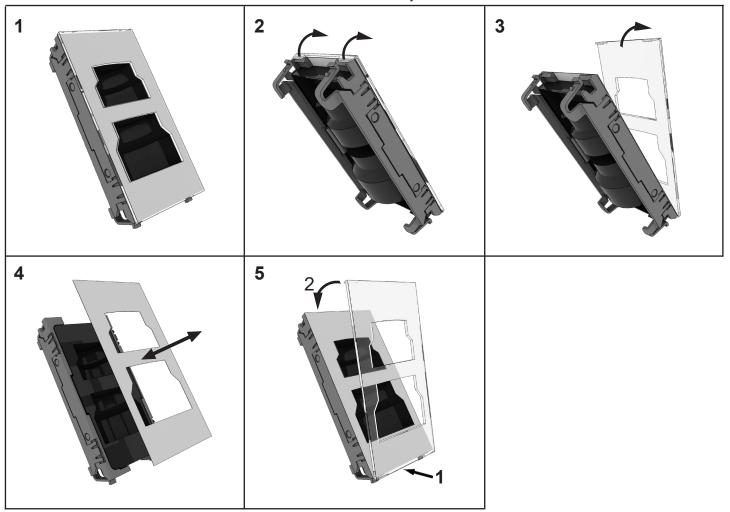


# Tile installation - Tester unit and "Architect" furniture Install only in retrofit metal structure Only tiles with adapters attached can be used 1 2 3 4


# Tile installation - Signature Wall drawer

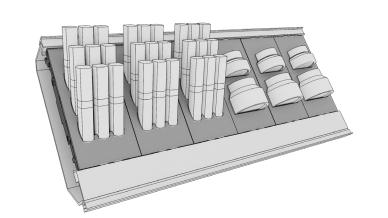

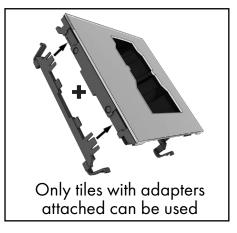


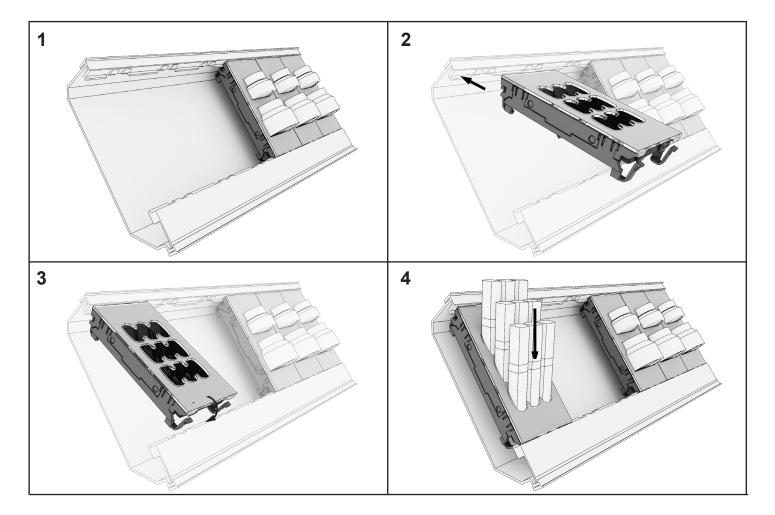

#### Tile installation - CSP drawer

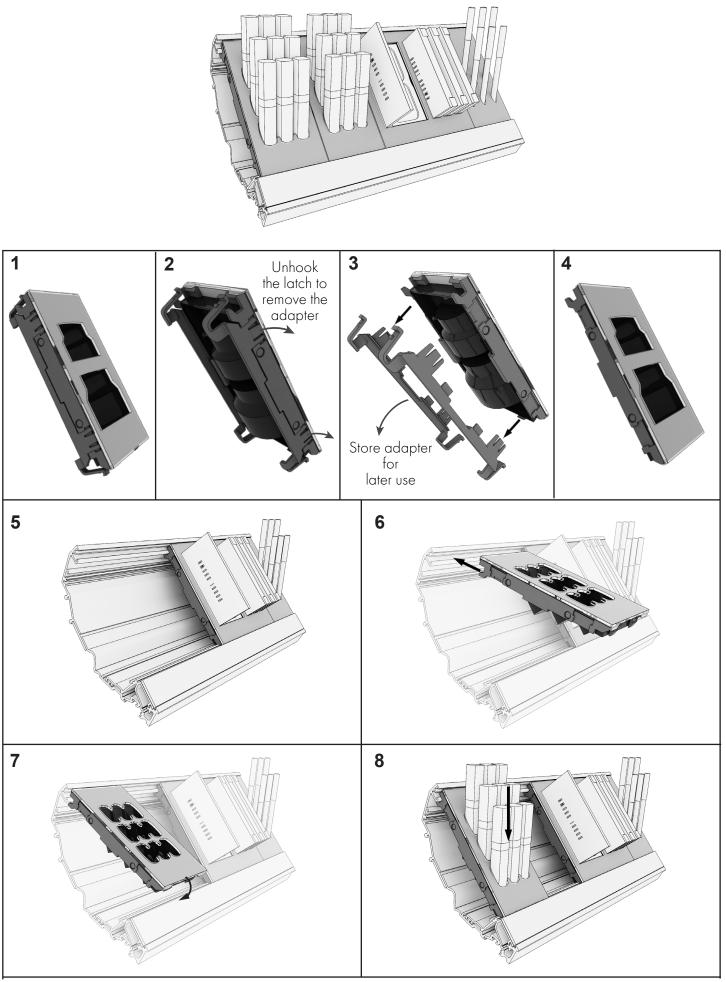


## Taking out tile - Signature Wall and Tester unit

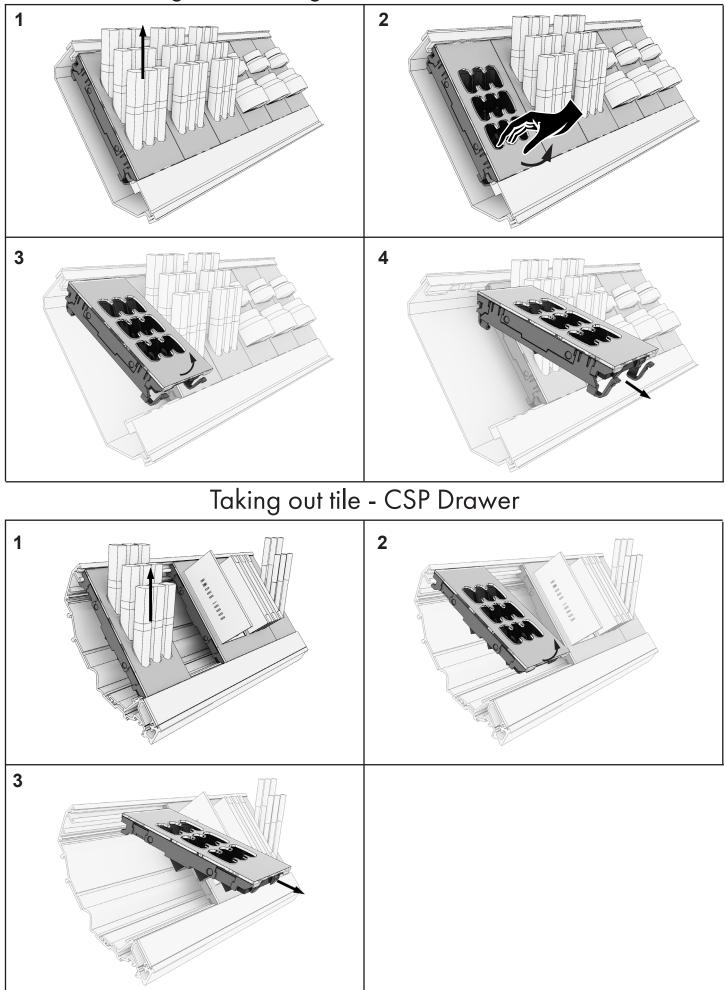

#### Disposal instruction

#### NOMENCLATUR

generic module
РММА
PS
paper

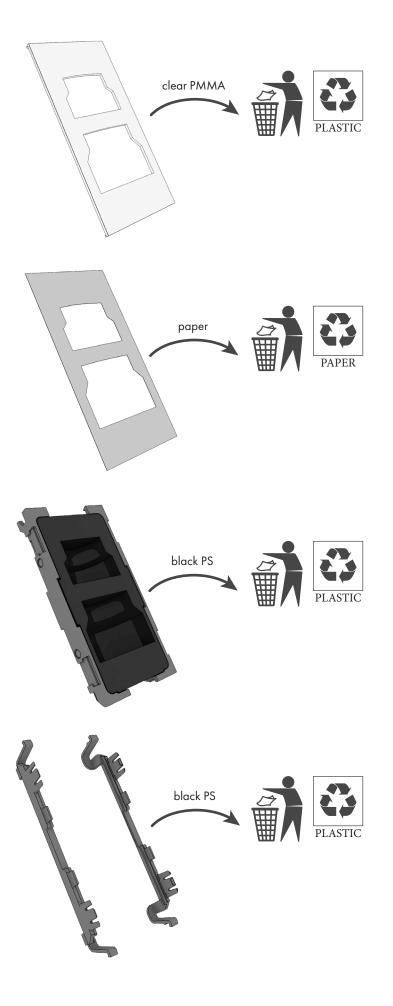

#### Cleaning


It is essential that the unit is regularly cleaned.

#### DO NOT USE:


- Cleaning spray!
- Window cleaner!
- Household cleaner!
- Aerosol spray!
- Solvent!
- Alcohol!
- Ammonia!
- Acetone!
- Abrasive!

#### SAFE TO USE:


- Microfiber cloth
- Soapy solution (dishwashing liquid diluted in water) lightly applied to cloth

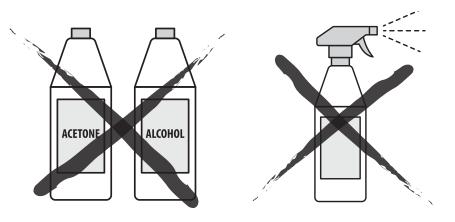


#### Retrofit to implement new Makeup tile system – Tester unit

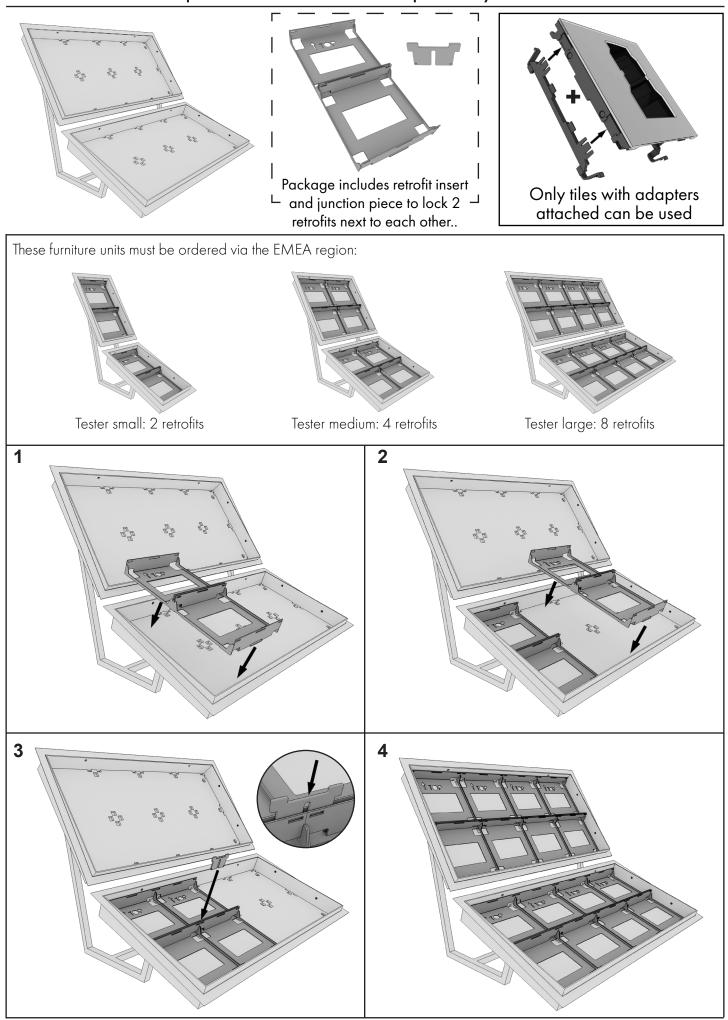


Retrofit to implement new Makeup tile system – Tester unit

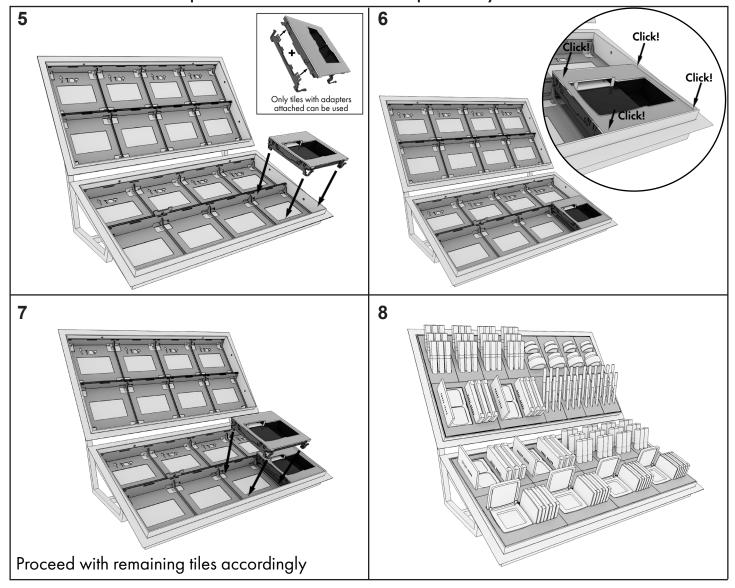

#### Retrofit to implement new Makeup tile system – Retailer format unit

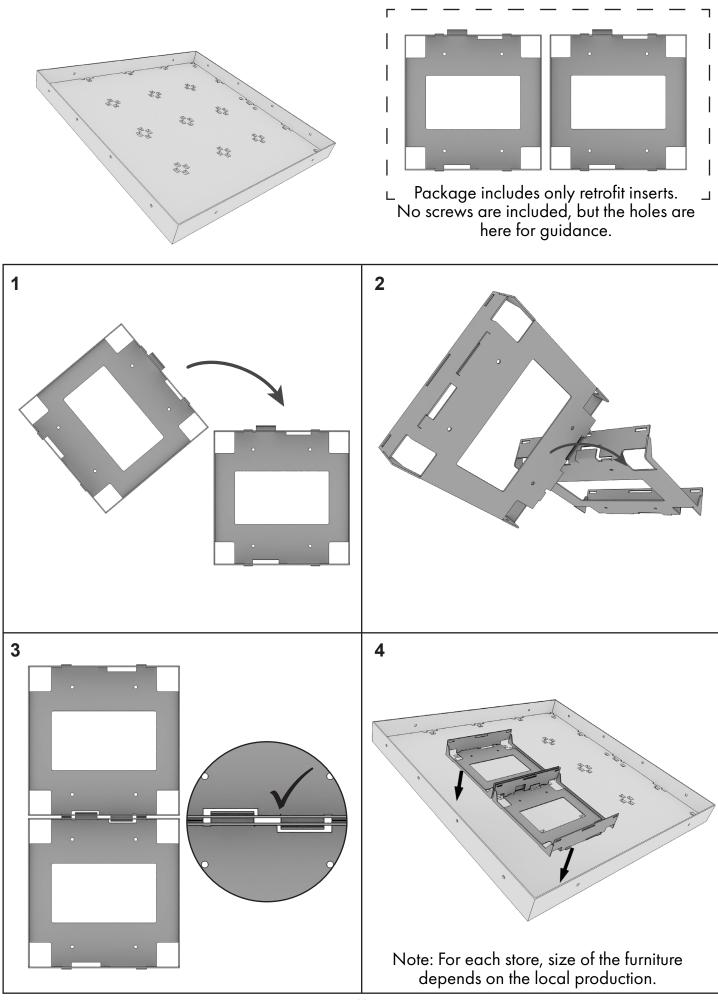

Retrofit to implement new Makeup tile system – Retailer format unit

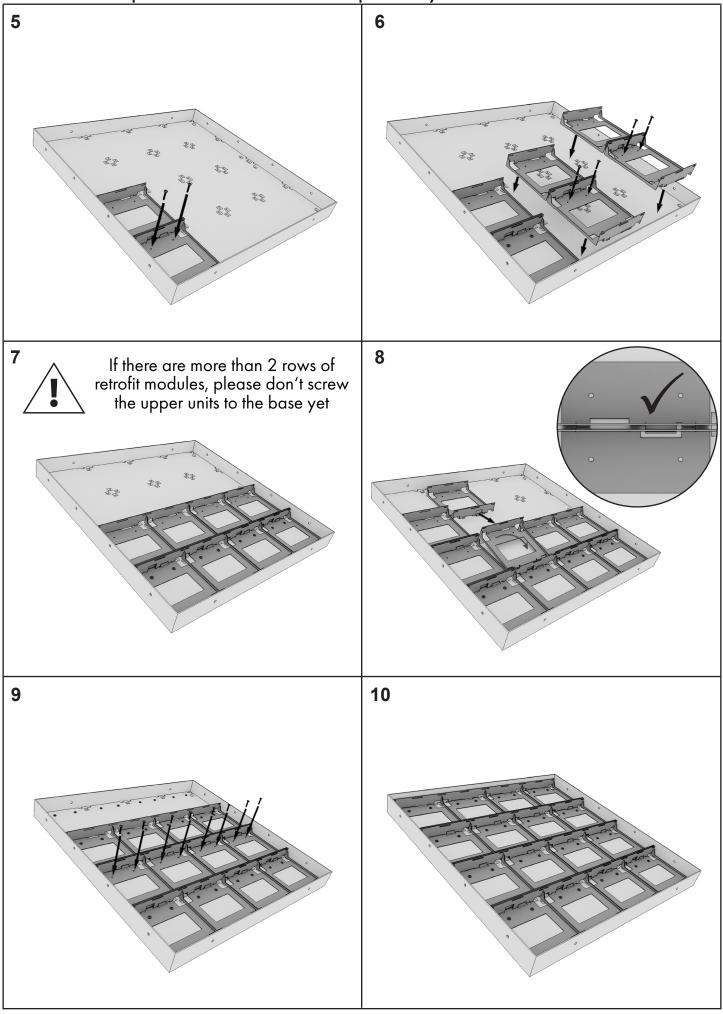

Retrofit to implement new Makeup tile system – Retailer format unit

